

**ARITECH**

**CP 32 / 3  
ALARM CONTROL PANEL**

*OPERATING INSTRUCTIONS*

---

## IMPORTANT TELEPHONE NUMBERS

---

ALARM COMPANY \_\_\_\_\_

LOCAL POLICE STATION \_\_\_\_\_

OTHER \_\_\_\_\_

---

---

## ALARM ZONES

---

ZONE 1 \_\_\_\_\_

ZONE 2 \_\_\_\_\_

ZONE 3 \_\_\_\_\_

ZONE 4 \_\_\_\_\_

ZONE 5 \_\_\_\_\_

ZONE 6 \_\_\_\_\_

---

---

## INDEX

	Page
Good Housekeeping	5
Display Conditions	5
Switching System On and Leaving the Building	6
Switching Off the System - Entering the Building	7
Switching System On/Off in Part Guard	8
Inhibit Facility	9/10
Quick Set No Buzzer	11
Entering the Building after an Alarm Activation	12
Bell Test Facility	13
Changing your Security Operator Code	14
Total Power Failure	15

## GOOD HOUSEKEEPING


Before setting up your alarm system, it is advisable that you make a tour of inspection of the protected areas to ensure that false alarms due to badly closed doors or moving objects are prevented.

- A) Check that all doors and windows are securely locked.
- B) Check that there is no possibility of objects falling in front of movement detection devices.
- C) Should a fault occur on your alarm system, you should call your alarm company without delay.


## DISPLAY CONDITIONS

- Green Lamp = Mains power ON
- No Green Lamp = Mains Power Failure
- = System Set
- 1 - 3 = Alarm zones 1 to 3
- P = System is set on perimeter zones only
- H = H means that a zone has been inhibited
- A = Personal Attack Alarm
- E = Entry/Exit Zone.

## SWITCHING SYSTEM ON AND LEAVING THE BUILDING

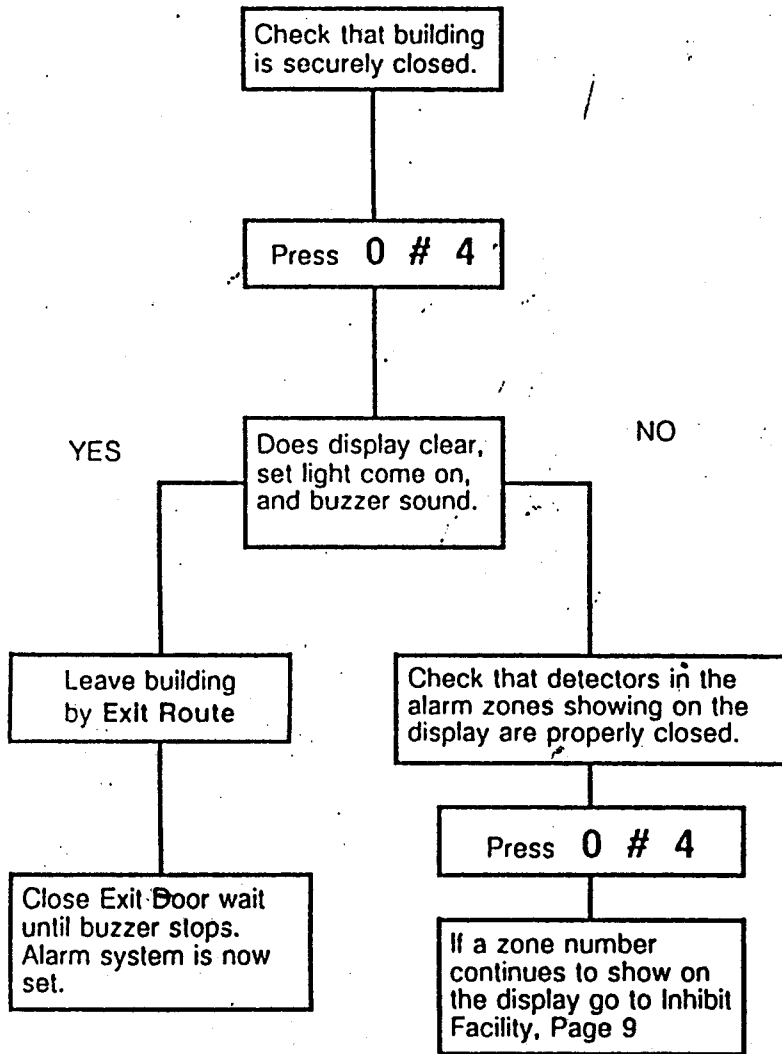


## SWITCHING OFF THE SYSTEM – ENTERING THE BUILDING

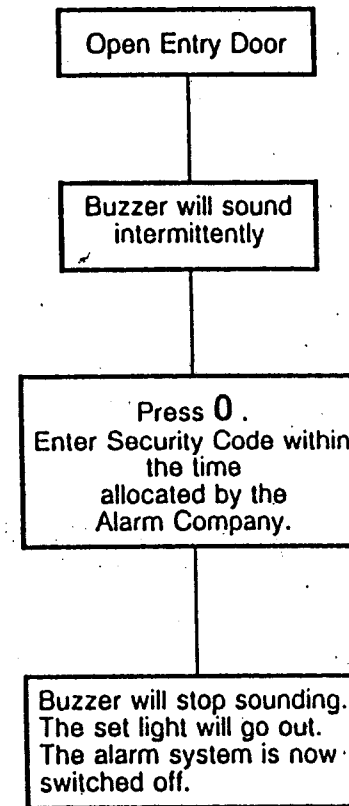

THE ABOVE PROCEDURE CAN ALSO BE ACHIEVED BY PRESSING 0 AND ENTERING THE OPERATOR SECURITY CODE

(USED IN DOMESTIC INSTALLATIONS WHEN THE HOUSE IS OCCUPIED)

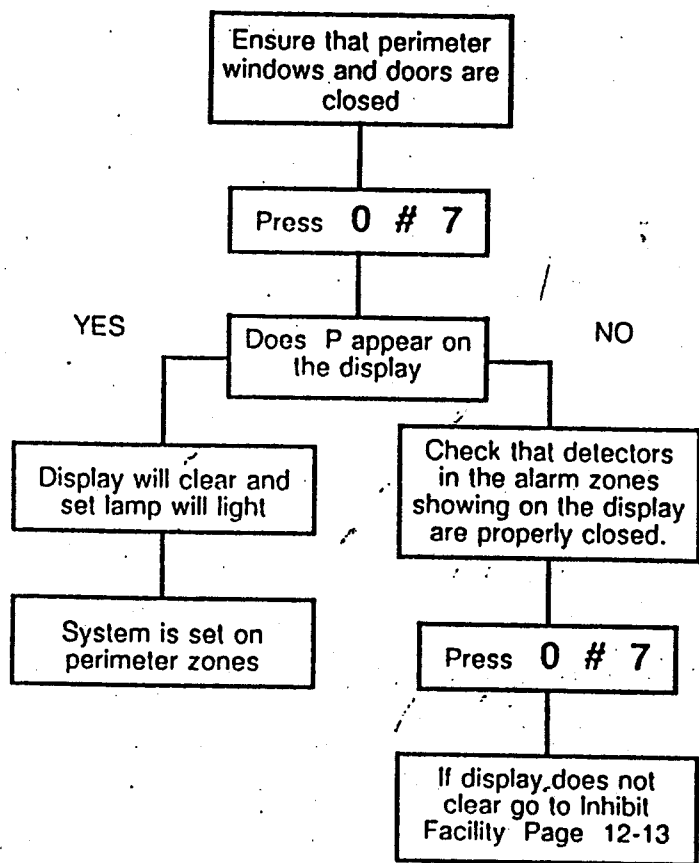


To switch off system  
Press 0 Enter Code

When the set lamp goes out the system is switched off


The operator would use the Inhibit Facility when :

- A) He wishes to inhibit an alarm zone.
- B) He wishes to inhibit an alarm zone with a permanent fault showing on the display.

### PROCEDURE FOR INHIBITING ALARM ZONES

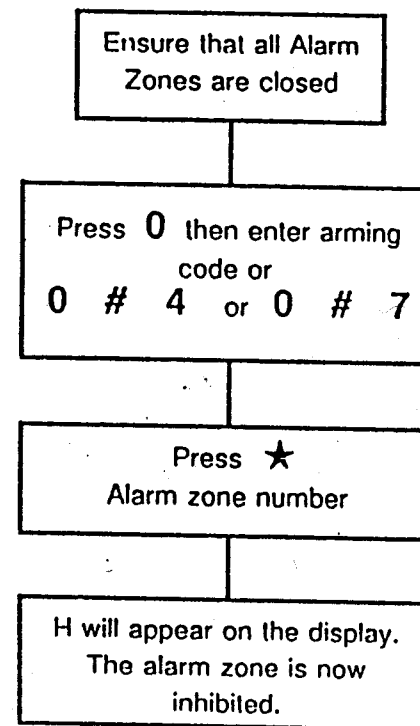


EXAMPLE: If you wish to leave the building and inhibit zone 2. Proceed as follows:

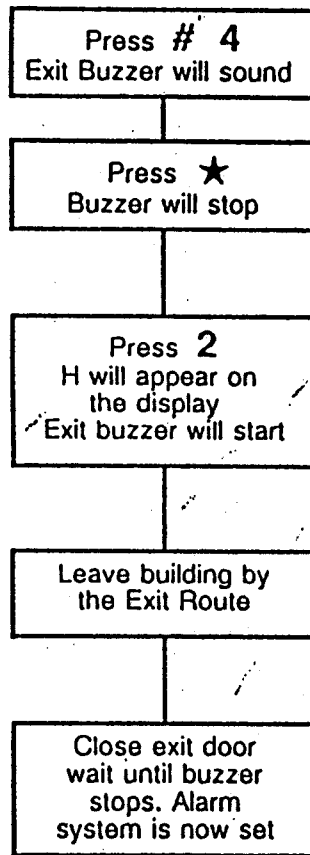


IF THE INHIBIT PROCEDURE IS USED BECAUSE AN ALARM ZONE SHOWS PERMANENT FAULT, CONTACT THE ALARM COMPANY AS SOON AS POSSIBLE.

## QUICK SET NO BUZZER

To arm the system on all alarm zones without the buzzer sounding proceed as follows:

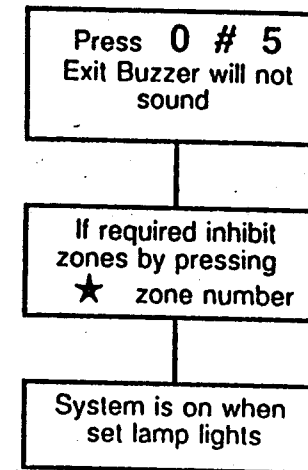


## ENTERING THE BUILDING AFTER AN ALARM ACTIVATION

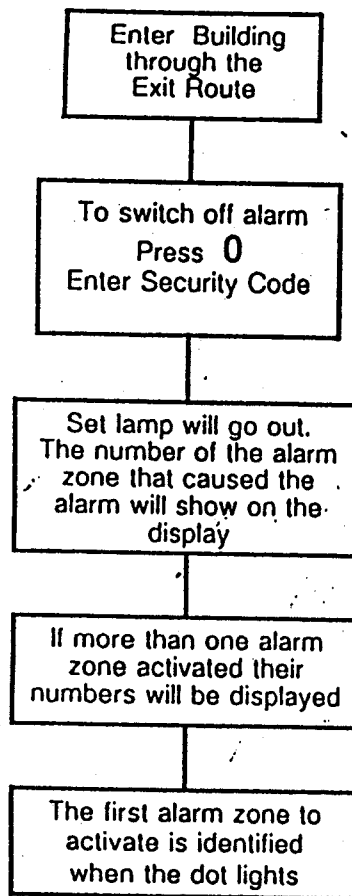

ALWAYS CONTACT THE ALARM COMPANY AFTER AN ALARM ACTIVATION.


Before setting the alarm system the operator may wish to verify that all warning devices are working. Proceed as follows:

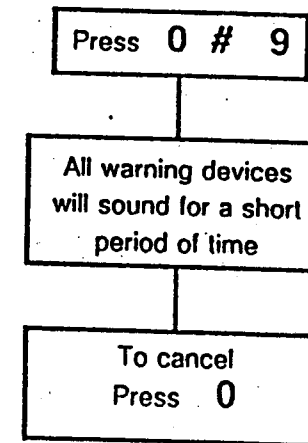

## CHANGING YOUR OPERATOR CODE

The operator can generate a new security code by using his existing code.

The procedure to generate a new code is as follows:

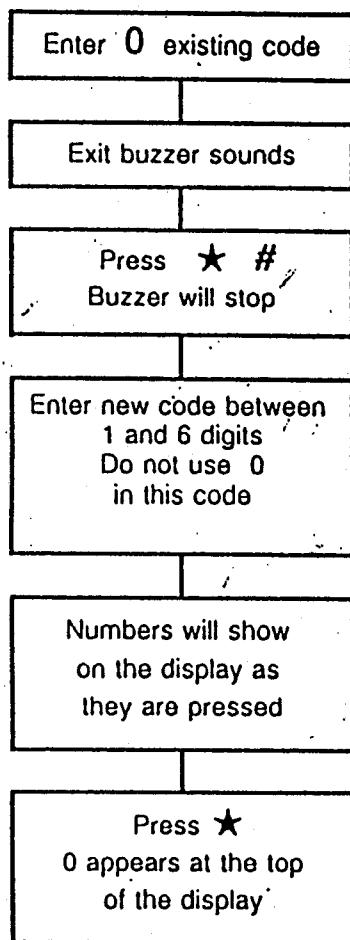

This indicates that the code has been accepted.

To clear the display Press 0

TO CANCEL THIS CODE FOLLOW THE PROCEDURE ABOVE TO ENTER A NEW CODE.

In a total power failure condition caused perhaps by a lightning storm the panel may revert to the Master Security Code. In the unlikely event of this happening the operator security code would be 0 1 1 2 2 and the entry and exit times would be 20 seconds and 30 seconds respectively.

To program Operator Code see Page 14.

Call the alarm company immediately to test the system fully.